

Subject: How to regulate a stock thermostat?

Models: NG

IMPORTANT: Disconnect the machine from the power supply. In case of replacement, it is advisable to take photos beforehand of how the item to be replaced is installed/located, in order to facilitate its commissioni.

1- The stock thermostat is located on the front of the machine. In order to access it you must remove the ventilation grille.



2- The thermostats can be adjusted from position 1 (highest temperature 11°C) to position 7 (lowest temperature 4°C).



3- By default, the machines leave the factory set at 5.5

