


Subjects: How to replace new stop kit?

Models: NG

IMPORTANT: The machine must be disconnected from the power supply. In case of replacement, it is advisable to previously take photos of how the item to be replaced is installed/located, in order to facilitate its start-up.

1- The micro is located inside the machine, just above the ice drop tube. Next to the water bucket. You will recognize it, see the attached photo.

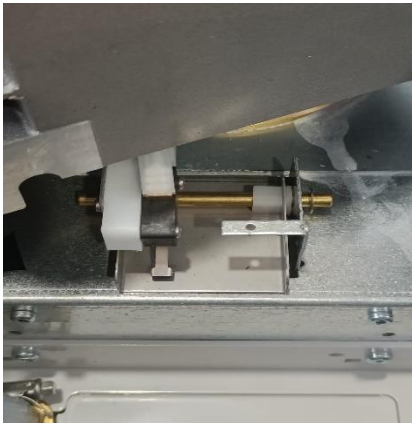


2- Remove the tilting shaft, remove the connections recording their order and release the microphone.



3- Once everything has been removed, replace it with the new one.



4- Install the new micro stop, place the cover downwards, leaving the holes in focus to be able to insert the tilting shaft.

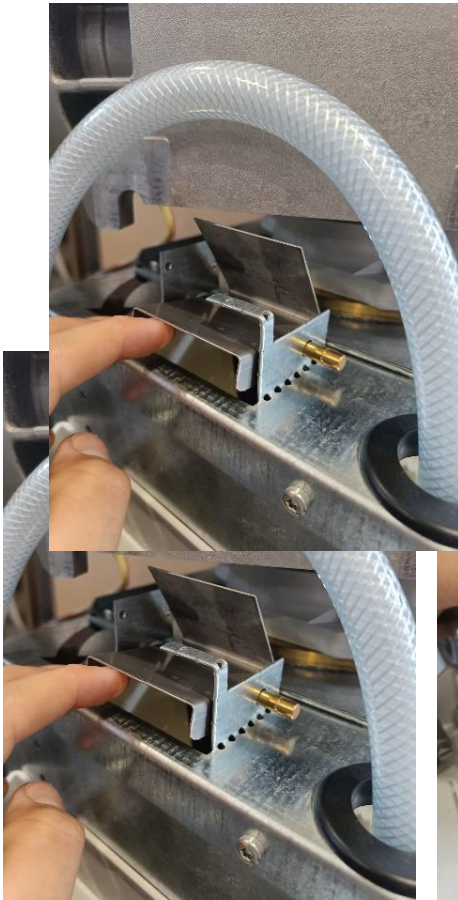

5- Connect the fastons in their original position.
From top to bottom:
WHITE - FUCSIA - GRAY

